


Assembly instructions

Item #	Tightening torque	Dir.	Glue
1-18	7,5 ft.lb - 10 Nm	↻	
35-24	11 ft.lb - 15 Nm	↻	Loctite 222
24-23-1	26 ft.lb - 35 Nm	↻↻	Loctite 243

Index No	Part Ref	Description	Qty
A	6154600400	REGULATOR ASSEMBLY	
3		REGULATOR	1
4		O-RING 8.1x1.6	1
5		O-RING 8x1	1
6		SPRING RING WR9	1
7		VALVE STEM	1
8		O-RING 2x1	1
B	2050546343	VALVE KIT	
9		TIP VALVE	1
10		SPRING	1
C	2050546353	FRONT PLATE ASSEMBLY	
26		FRONT PLATE	1
27		WASHER	1
28	6157581380	BEARING 8x22x7608Z	1
29		PIN SPRING 2.5x4	1
D	2050546363	REAR PLATE ASSEMBLY	
29		PIN SPRING 2.5x4	1
30		REAR PLATE	1
32	6157580630	BEARING 5x16x5625ZZ	1
G	2050546403	TUNE-UP KIT CP3030-3..	
2		SEAL	1
16		FELT	1
33	2050547783	BLADE 300W (SET OF 4)	1
22		GASKETS (x2)	1
	2050552903	EC declaration	
	6159948770	Safety instructions	
	2050553893	Operator's manual	

Index No	Part Ref	Description	Qty
F	2050546413	SMALL PARTS KIT	
6		SPRING RING WR9	1
8		O-RING 2x1	1
12		O-RING 27x2	1
14		NEEDLE 2.5x11.8	1
17		O-RING 17x2	1
21		O-RING 10.5x1.5	1
36		EXTERNAL RING	1
37		SPACER	1
38		O-RING 15.6x1.78	1
1	2050547773	HANDLE ASSY (incl. Part # 15)	1
11	6155740660	AIR CONTROL RING 25 000RPM	1
13	2050541493	SAFETY LEVER	1
15		REAR CAP	1
18	2050542533	INLET ASSY	1
19	6153212410	INSERT	1
20	6156561900	RUBBER GASKET	1
23	6157301890	NUT	1
24	6155653210	MOTOR HOUSING	1
25	6154001500	CYLINDER	1
31	2050548013	ROTOR	1
34	2050552963	ROTOR NUT	1
35	6156731400	COVER	1
39	2050548063	SPANNER	1
	6158727980	WARNING STICKER	1

Spare parts without part number are not sold separately

2050553863 rev. 2

Recommended accessories


2050549913 2" pad 1/4"-20 (included)